

# ACCESSORIES COMPATIBILITY GUIDE

MODEL	Filter Adapter				Diffuser Tip			Traffic Wand			Rechargeable Battery						Remote Switch		Rail Mount		Bike Mount	MODEL	
	AOF				AOD			AOT			ARB						AER		ALG	ALB			
	S	S+	M	L	S	M	L	S	M	L	L14 14500	L14/USB 14500	L16 16340	L2 18650	L18 18650	L18/USB 18650	L4 26650	01/02	03	01	00		10
<b>TK-SERIES</b>																							<b>TK-SERIES</b>
TK75														✓	✓	✓							TK75
TK65R														✓	✓	✓							TK65R
TK47														✓	✓	✓							TK47
TK47UE														✓	✓	✓							TK47UE
TK35														✓	✓	✓							TK35
TK35UE														✓	✓	✓							TK35UE
TK32														✓	✓	✓			✓	✓	✓		TK32
TK20R			✓							✓				✓	✓	✓			✓	✓	✓		TK20R
TK16			✓							✓				✓	✓	✓			✓	✓	✓		TK16
TK15UE			✓							✓				✓	✓	✓		✓	✓	✓	✓		TK15UE
TK09			✓							✓				✓	✓	✓		✓	✓	✓	✓		TK09
<b>PD-SERIES</b>																							<b>PD-SERIES</b>
PD40R			✓							✓													PD40R
PD35 TAC		✓								✓				✓	✓	✓		✓		✓	✓		PD35 TAC
PD35		✓								✓				✓	✓	✓		✓		✓	✓		PD35
PD32										✓				✓	✓	✓				✓	✓		PD32
PD25													✓										PD25
<b>LD-SERIES</b>																							<b>LD-SERIES</b>
LD75C														✓	✓	✓							LD75C
LD41				✓			✓					✓											LD41
LD22	✓						✓															✓	LD22
LD12 2017	✓						✓					✓	✓										LD12 2017
LD09												✓	✓										LD09
LD02																							LD02
<b>E-SERIES</b>																							<b>E-SERIES</b>
E35UE							✓			✓				✓	✓	✓				✓	✓	✓	E35UE
E25UE		✓					✓			✓		✓	✓									✓	E25UE
E20		✓					✓			✓												✓	E20
E15													✓										E15
E12													✓										E12
E05																							E05
E01																							E01
<b>MC-SERIES</b>																							<b>MC-SERIES</b>
MC11													✓										MC11
<b>FD-SERIES</b>																							<b>FD-SERIES</b>
FD41														✓	✓	✓							FD41
FD30														✓	✓	✓							FD30
<b>RC/UC-SERIES</b>																							<b>RC/UC-SERIES</b>
RC40																							RC40
RC20				✓			✓			✓										✓	✓	✓	RC20
RC11		✓					✓			✓				✓	✓					✓	✓	✓	RC11
RC09													✓										RC09
RC05													✓										RC05
UC35		✓					✓			✓				✓	✓	✓		✓		✓	✓	✓	UC35
UC30		✓					✓			✓				✓	✓	✓				✓	✓	✓	UC30
UC02																							UC02
UC02SS																							UC02SS
UC01																							UC01
<b>SD-SERIES</b>																							<b>SD-SERIES</b>
SD20				✓			✓			✓				✓	✓	✓					✓		SD20
SD11														✓	✓	✓					✓		SD11
<b>HP-SERIES</b>																							<b>HP-SERIES</b>
HP40F														✓	✓	✓							HP40F
HP30R														✓	✓	✓							HP30R
HP25R														✓	✓	✓							HP25R
HP15UE													✓										HP15UE
HP12														✓	✓	✓							HP12
<b>HL-SERIES</b>																							<b>HL-SERIES</b>
HL60R														✓	✓	✓							HL60R
HL55														✓	✓	✓							HL55
HL50																							HL50
HL30													✓										HL30
HL26R																							HL26R
HL23														✓									HL23
HL16														✓									HL16
HL15														✓									HL15
HL10																							HL10
HL05																							HL05
<b>BIKE LIGHT-SERIES</b>																							<b>BIKE LIGHT-SERIES</b>
BC30R														✓	✓	✓							BC30R
BC30														✓	✓	✓							BC30
BT30R																							BT30R
BC21R														✓	✓	✓							BC21R
<b>CAMP LANTERN-SERIES</b>																							<b>CAMP LANTERN-SERIES</b>
CL30R														✓	✓	✓							CL30R
CL25R														✓	✓	✓							CL25R
CL20																							CL20
CL05																							CL05

NOTE:  
 \* Only for ON/OFF operation.  
 \*\* Press down the anode side when taking out the battery in case the battery's anode stuck in the battery holder.