

ACCESSORIES COMPATIBILITY GUIDE

MODEL	Filter Adapter				Diffuser Tip			Traffic Wand			Rechargeable Battery						Remote Switch		Rail Mount		Bike Mount	MODEL	
	AOF				AOD			AOT			ARB						AER		ALG	ALB			
	S	S+	M	L	S	M	L	S	M	L	L14 14500	L14/USB 14500	L16 16340	L2 18650	L18 18650	L18/USB 18650	L4 26650	01/02	03	01	00		10
TK-SERIES																							TK-SERIES
TK75														✓	✓	✓							TK75
TK65R														✓	✓	✓							TK65R
TK47														✓	✓	✓							TK47
TK47UE														✓	✓	✓							TK47UE
TK35														✓	✓	✓							TK35
TK35UE														✓	✓	✓							TK35UE
TK32														✓	✓	✓				✓	✓	✓	TK32
TK2OR			✓							✓				✓	✓	✓				✓*	✓	✓	TK2OR
TK16			✓							✓				✓	✓	✓				✓	✓	✓	TK16
TK15UE			✓							✓				✓	✓	✓				✓	✓	✓	TK15UE
TK09			✓							✓				✓	✓	✓				✓	✓	✓	TK09
PD-SERIES																							PD-SERIES
PD40R			✓							✓													PD40R
PD35 TAC		✓								✓				✓	✓	✓					✓	✓	PD35 TAC
PD35		✓								✓				✓	✓	✓					✓	✓	PD35
PD32										✓				✓	✓	✓					✓	✓	PD32
PD25													✓										PD25
LD-SERIES																							LD-SERIES
LD75C														✓	✓	✓							LD75C
LD41				✓			✓						✓										LD41
LD22	✓						✓															✓	LD22
LD12 2017	✓						✓						✓										LD12 2017
LD09													✓										LD09
LD02													✓										LD02
E-SERIES																							E-SERIES
E35UE							✓			✓				✓	✓	✓				✓	✓	✓	E35UE
E25UE		✓					✓			✓			✓									✓	E25UE
E20		✓					✓			✓												✓	E20
E15														✓									E15
E12														✓									E12
E05																							E05
E01																							E01
MC-SERIES																							MC-SERIES
MC11														✓									MC11
FD-SERIES																							FD-SERIES
FD41														✓	✓	✓							FD41
FD30														✓	✓	✓							FD30
RC/UC-SERIES																							RC/UC-SERIES
RC40																							RC40
RC20				✓			✓			✓										✓	✓	✓	RC20
RC11		✓					✓			✓					✓	✓				✓	✓	✓	RC11
RC09														✓									RC09
RC05																✓							RC05
UC35		✓					✓			✓				✓	✓	✓				✓	✓	✓	UC35
UC30		✓					✓			✓				✓	✓	✓				✓	✓	✓	UC30
UC02																							UC02
UC02SS																							UC02SS
UC01																							UC01
SD-SERIES																							SD-SERIES
SD20				✓			✓			✓				✓	✓	✓					✓		SD20
SD11														✓	✓	✓					✓		SD11
HP-SERIES																							HP-SERIES
HP40F														✓	✓	✓							HP40F
HP30R														✓	✓	✓							HP30R
HP25R														✓	✓	✓							HP25R
HP15UE														✓									HP15UE
HP12														✓	✓	✓							HP12
HL-SERIES																							HL-SERIES
HL60R														✓	✓	✓							HL60R
HL55														✓	✓	✓							HL55
HL50																							HL50
HL30																✓							HL30
HL26R																✓							HL26R
HL23																✓							HL23
HL16																✓							HL16
HL15																✓							HL15
HL10																							HL10
HL05																							HL05
BIKE LIGHT-SERIES																							BIKE LIGHT-SERIES
BC30R																							BC30R
BC30														✓	✓**	✓**							BC30
BT30R																							BT30R
BC21R														✓	✓	✓							BC21R
CAMP LANTERN-SERIES																							CAMP LANTERN-SERIES
CL30R																✓							CL30R
CL25R																✓							CL25R
CL20																✓							CL20
CL05																							CL05

NOTE:
* Only for ON/OFF operation.
** Press down the anode side when taking out the battery in case the battery's anode stuck in the battery holder.