

ACCESSORIES COMPATIBILITY GUIDE

MODEL	Filter Adapter				Diffuser Tip			Traffic Wand			Battery				Remote Switch		Rail Mount		Bike Mount	MODEL		
	AOF				AOD			AOT			ARB				AER		ALG		ALB			
	S	S+	M	L	S	M	L	S	M	L	L14	L14/USBL16	L2	L18	L18/USBL4	01/02	03	01	00	10		
TK-SERIES																					TK-SERIES	
TK75 2018													✓	✓								TK75 2018
TK72R																						TK72R
TK65R																						TK65R
TK47																						TK47
TK47UE																						TK47UE
TK35 2018																						TK35 2018
TK35UE 2018																						TK35UE 2018
TK32																						TK32
TK25IR	✓	✓																✓	✓	✓	✓	TK25IR
TK25R&B	✓	✓																✓	✓	✓	✓	TK25R&B
TK25Red	✓	✓																✓	✓	✓	✓	TK25Red
TK20R			✓																			TK20R
TK16			✓																			TK16
TK15UE			✓																			TK15UE
TK09			✓																			TK09
PD-SERIES																						PD-SERIES
PD40R			✓																		✓	PD40R
PD35 TAC		✓				✓																PD35 TAC
PD35 V2.0		✓				✓																PD35 V2.0
PD32						✓																PD32
PD25																						PD25
LD-SERIES																						LD-SERIES
LD75C																						LD75C
LD41				✓																		LD41
LD22				✓																		LD22
LD12	✓	✓																			✓	LD12
LD09																						LD09
LD02																						LD02
E-SERIES																						E-SERIES
E35UE						✓															✓	E35UE
E25UE		✓				✓																E25UE
E20		✓				✓																E20
E15																						E15
E12																						E12
E05																						E05
E01																						E01
MC-SERIES																						MC-SERIES
MC11																						MC11
FD-SERIES																						FD-SERIES
FD65																						FD65
FD45																						FD45
FD41			✓																			FD41
FD30																						FD30
FD20		✓																				FD20
RC-SERIES																						RC-SERIES
RC40																						RC40
RC20																						RC20
RC11		✓																			✓	RC11
RC09																						RC09
RC05																						RC05
UC52																						UC52
UC35		✓																				UC35
UC30		✓																				UC30
UC09																						UC09
UC02																						UC02
UC02SS																						UC02SS
UC01																						UC01
SD-SERIES																						SD-SERIES
SD20																						SD20
SD11																						SD11
SE-SERIES																						SE-SERIES
SE10																						SE10
HP-SERIES																						HP-SERIES
HP30R																						HP30R
HP25R																						HP25R
HP15UE																						HP15UE
HM-SERIES																						HM-SERIES
HM50R																						HM50R
HL60R																						HL60R
HL55																						HL55
HL23																						HL23
HL-SERIES																						HL-SERIES
HL40R																						HL40R
HL32R																						HL32R
HL30 2018																						HL30 2018
HL26R																						HL26R
HL16																						HL16
HL15																						HL15
HL12R																						HL12R
HL10																						HL10
BIKE LIGHT																						BIKE LIGHT
BC30R																						BC30R
BC30																						BC30
BT30R																						BT30R
BC21R																						BC21R
CAMP LANTERN																						CAMP LANTERN
CL30R																						CL30R
CL25R																						CL25R
CL20R																						CL20R
CL09																						CL09
CL05																						CL05
CP30R																						CP30R

NOTE:
 * Only for ON/OFF operation.
 ** Press down the anode side when taking out the battery in case the battery's anode stuck in the battery holder.